

# QUICK-START GUIDE DENON DJ MC4000

serato



DJ INTRO

# Installation and Setup

The Denon DJ MC4000 is a class compliant USB plug and play device for Mac and Windows.


1. Download and install the latest version of Serato DJ Intro from <http://serato.com/dj/downloads>
2. Connect your Denon DJ MC4000 to an available USB Port.
3. Open Serato DJ Intro.
4. The Denon DJ MC4000 platters require a few touches by the user in order to calibrate to their environment. After power up and start of Serato DJ Intro, tap the platters a few times to set their sensitivity.

**serato**



**DJ INTRO**

# Controller

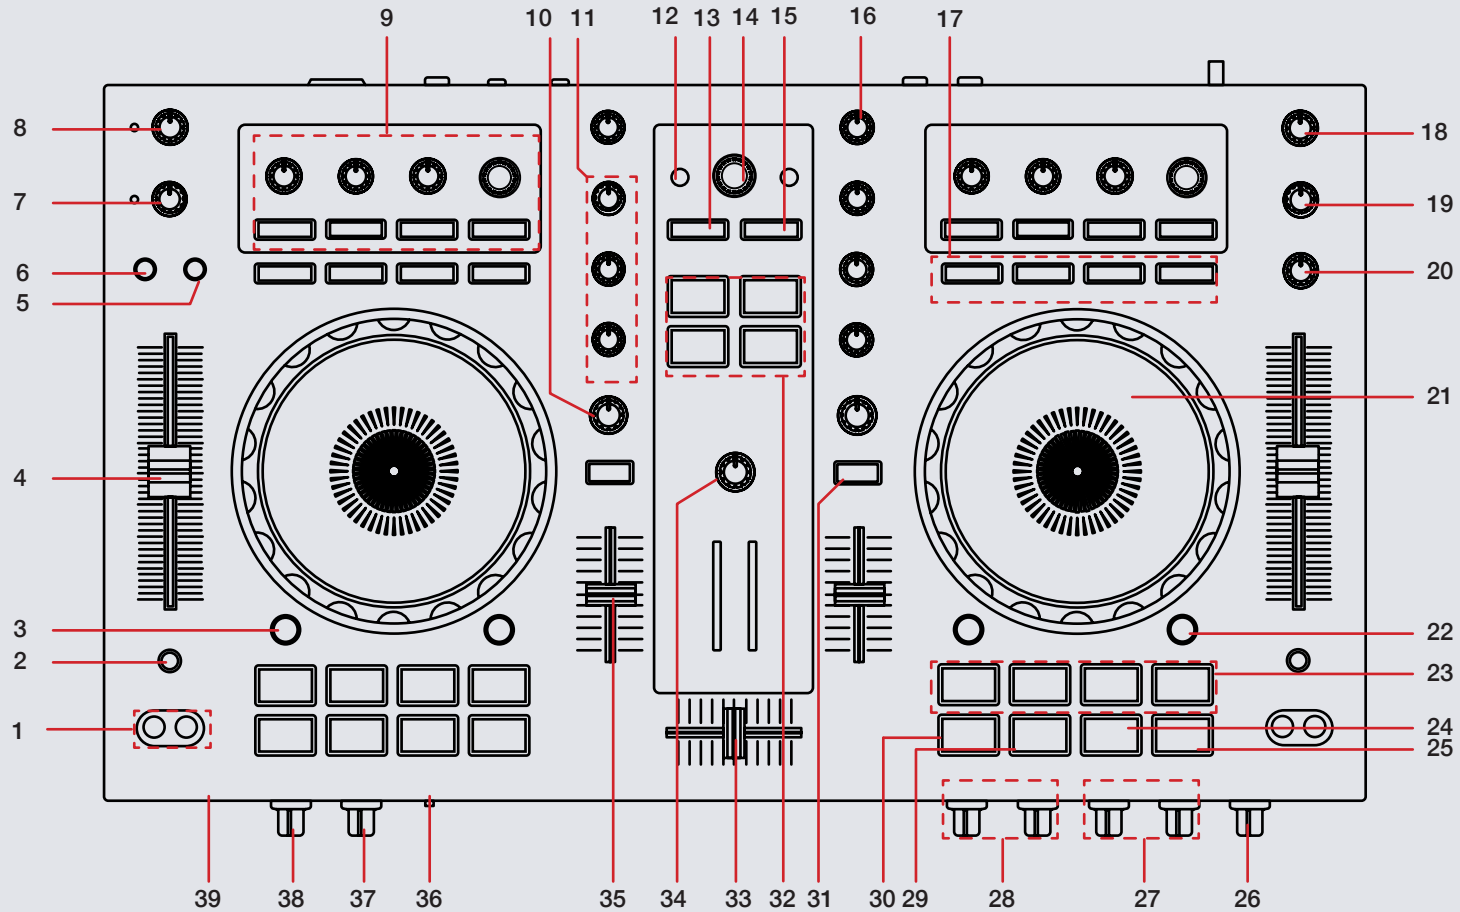

**NOTE:** The **SHIFT** button is used with other buttons that have shift modifier functions.

#	Denon DJ MC4000 Control	Serato DJ Intro Function	Shift Function
1	PITCH BEND	Momentarily adjust pitch +/-	Fast Forward/Rewind
2	KEYLOCK	Keylock ON	Toggle pitch range
3	VINYL	Vinyl platter mode	Censor
4	TEMPO FADER	Adjust tempo of loaded track	
5	TALK OVER	Enable MIC talk-over	Post
6	ECHO	Enable MIC echo	
7	MIC 2	Mic 2 output level	
8	MIC 1	Mic 1 output level	
9	FX SECTION	SEE DJ-FX SECTION FOR MORE INFORMATION	
10	FILTER	Channel HP/LP Filter	
11	CHANNEL EQ	Adjust EQ of channel	
12	LOAD	Load highlighted track to selected deck	
13	BACK	Back (Library function)	Toggle Serato DJ Intro panels
14	BROWSE	Browse Serato DJ Intro library	
15	LOAD PREP	Add highlighted track to Prepare crate	Open Prepare panel
16	LEVEL	Channel gain level	
17	LOOP SECTION	SEE LOOPING SECTION FOR MORE INFORMATION	
18	MASTER	Adjust Master output volume	
19	BOOTH	Adjust Booth output volume	
20	AUX	Adjust AUX output volume	
21	PLATTER	Control currently loaded track	
22	PAD MODE	N/A	
23	PERFORMANCE PADS	SEE PERFORMANCE PADS SECTION FOR MORE INFORMATION	

serato



 
DJ INTRO

**NOTE:** The **SHIFT** button is used with other buttons that have shift modifier functions.

#	Denon DJ MC4000 Control	Serato DJ Intro Function	Shift Function
24	CUE	Set or play from Temporary Cue	Load previous track
25	PLAY	Play/Pause	Stutter Play
26	MIC ECHO	Adjust MIC Echo Min/Max	
27	MIC 2 EQ	MIC 2 EQ controls	
28	MIC 1 EQ	MIC 1 EQ controls	
29	SYNC	SYNC On	SYNC Off
30	SHIFT	Used with other controls that have SHIFT modifier functions	
31	CUE	Monitor selected channel in headphones	
32	SAMPLER	SEE SAMPLER SECTION FOR MORE INFORMATION	
33	CROSSFADER	Fade audio between channels	
34	SAMPLER VOL	Adjust sampler output volume	
35	CHANNEL FADER	Control channel volume	
36	SPLIT CUE	Split Cue On/Off switch	
37	MONITOR PAN	Headphone Cue/Master mix	
38	MONITOR LEVEL	Headphone output level	
39	PHONES	Headphone 1/4" and 1/8" outputs	

**serato**



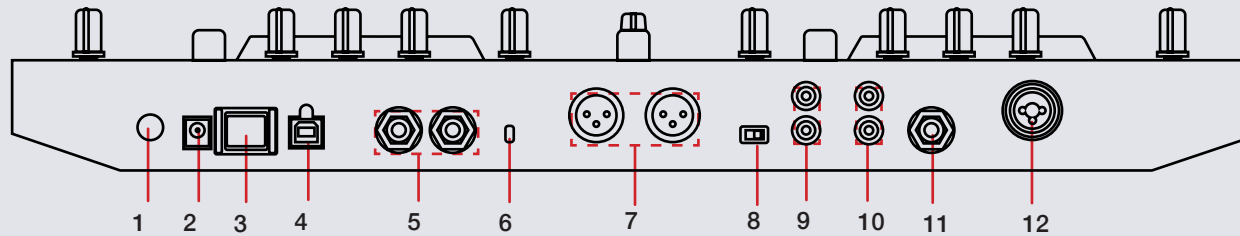

#	Denon DJ MC4000 Control	Function
1	GND	Grounding posts for connecting turntables
2	DC IN	Connect DC power cable
3	POWER	Power ON
4	USB	Connect MC4000 to computer via USB
5	BOOTH OUT	Booth TRS output
6	KENSINGTON LOCK	Kensington Lock (not included)
7	BALANCED MASTER OUT (XLR)	Balanced XLR output
8	STEREO/MONO	Unbalanced Stereo/Mono output switch
9	UNBALANCED MASTER OUT (RCA)	Unbalanced RCA output
10	AUX INPUT	Aux RCA input
11	MIC 2 INPUT	Mic 2 TRS input
12	MIC 1 INPUT	Mic 1 TRS/XLR input

## Performance Pads



The performance pads let you set, trigger and delete Cue Points 1-4 from Serato DJ Intro.

- Hot Cue (1-4) Mode: When pressing pads 1-4 you can add 4 Cue Points. Holding SHIFT and pressing pads 1-4 will delete the Cue Points.

## Sampler

The MC4000 has 4 dedicated Sampler pads to play samples loaded in your Sampler slot. If no sample is loaded, pressing pads 1-4 will load the currently highlighted track in the library to the respective sampler slot.

Adjust the Sampler output volume using the Sampler knob below the pads.

MC4000 Control	Sampler	Shift
SAMPLER 1-4	Trigger Sample slot	Stop playing sample

## DJ-FX

You can have up to three different effects active per Virtual deck within Serato DJ Intro with the Pioneer DDJ-SB.

MC4000 Control	Serato DJ Intro	Shift
FX KNOB 1-3	Adjust FX 1-3 depth	FX slot select 1-3
BEATS KNOB	Adjust Beats multiplier timing	
FX ON 1-3	Turn FX 1-3 On/Off	FX slot select 1-3
TAP	Tap Tempo (Hold for Auto)	Toggle Single/Multi FX mode


## Looping

 
You have the choice of Auto or Manual looping within Serato DJ Intro with the Denon DJ MC4000.

MC4000 Control	Serato DJ Intro	Shift
AUTO	Auto Loop On/Off	Auto 4-beat loop
X 1/2	Half currently selected Loop	Set manual Loop In point
X 2	Double currently selected Loop	Set manual Loop Out point
RELOOP	Reloop / Loop Off	Loop Roll (hold)

**NOTE:** The best way to edit the start and end points of a manual loop is with the jog wheel/platter on your Denon DJ MC4000.

## Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in next to the setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro, please go to our website [www.serato.com](http://www.serato.com) or refer to the Serato DJ Intro Software Manual.

For more information on your controller, please refer to the hardware manual.

For further help, please contact [support@serato.com](mailto:support@serato.com) or go to [www.serato.com/dj-intro/support](http://www.serato.com/dj-intro/support)

serato



DJ INTRO